


# TRIODE ELECTRONICS JCM800 2204 50W LAYOUT

W/ 40-18033 Power Transformer

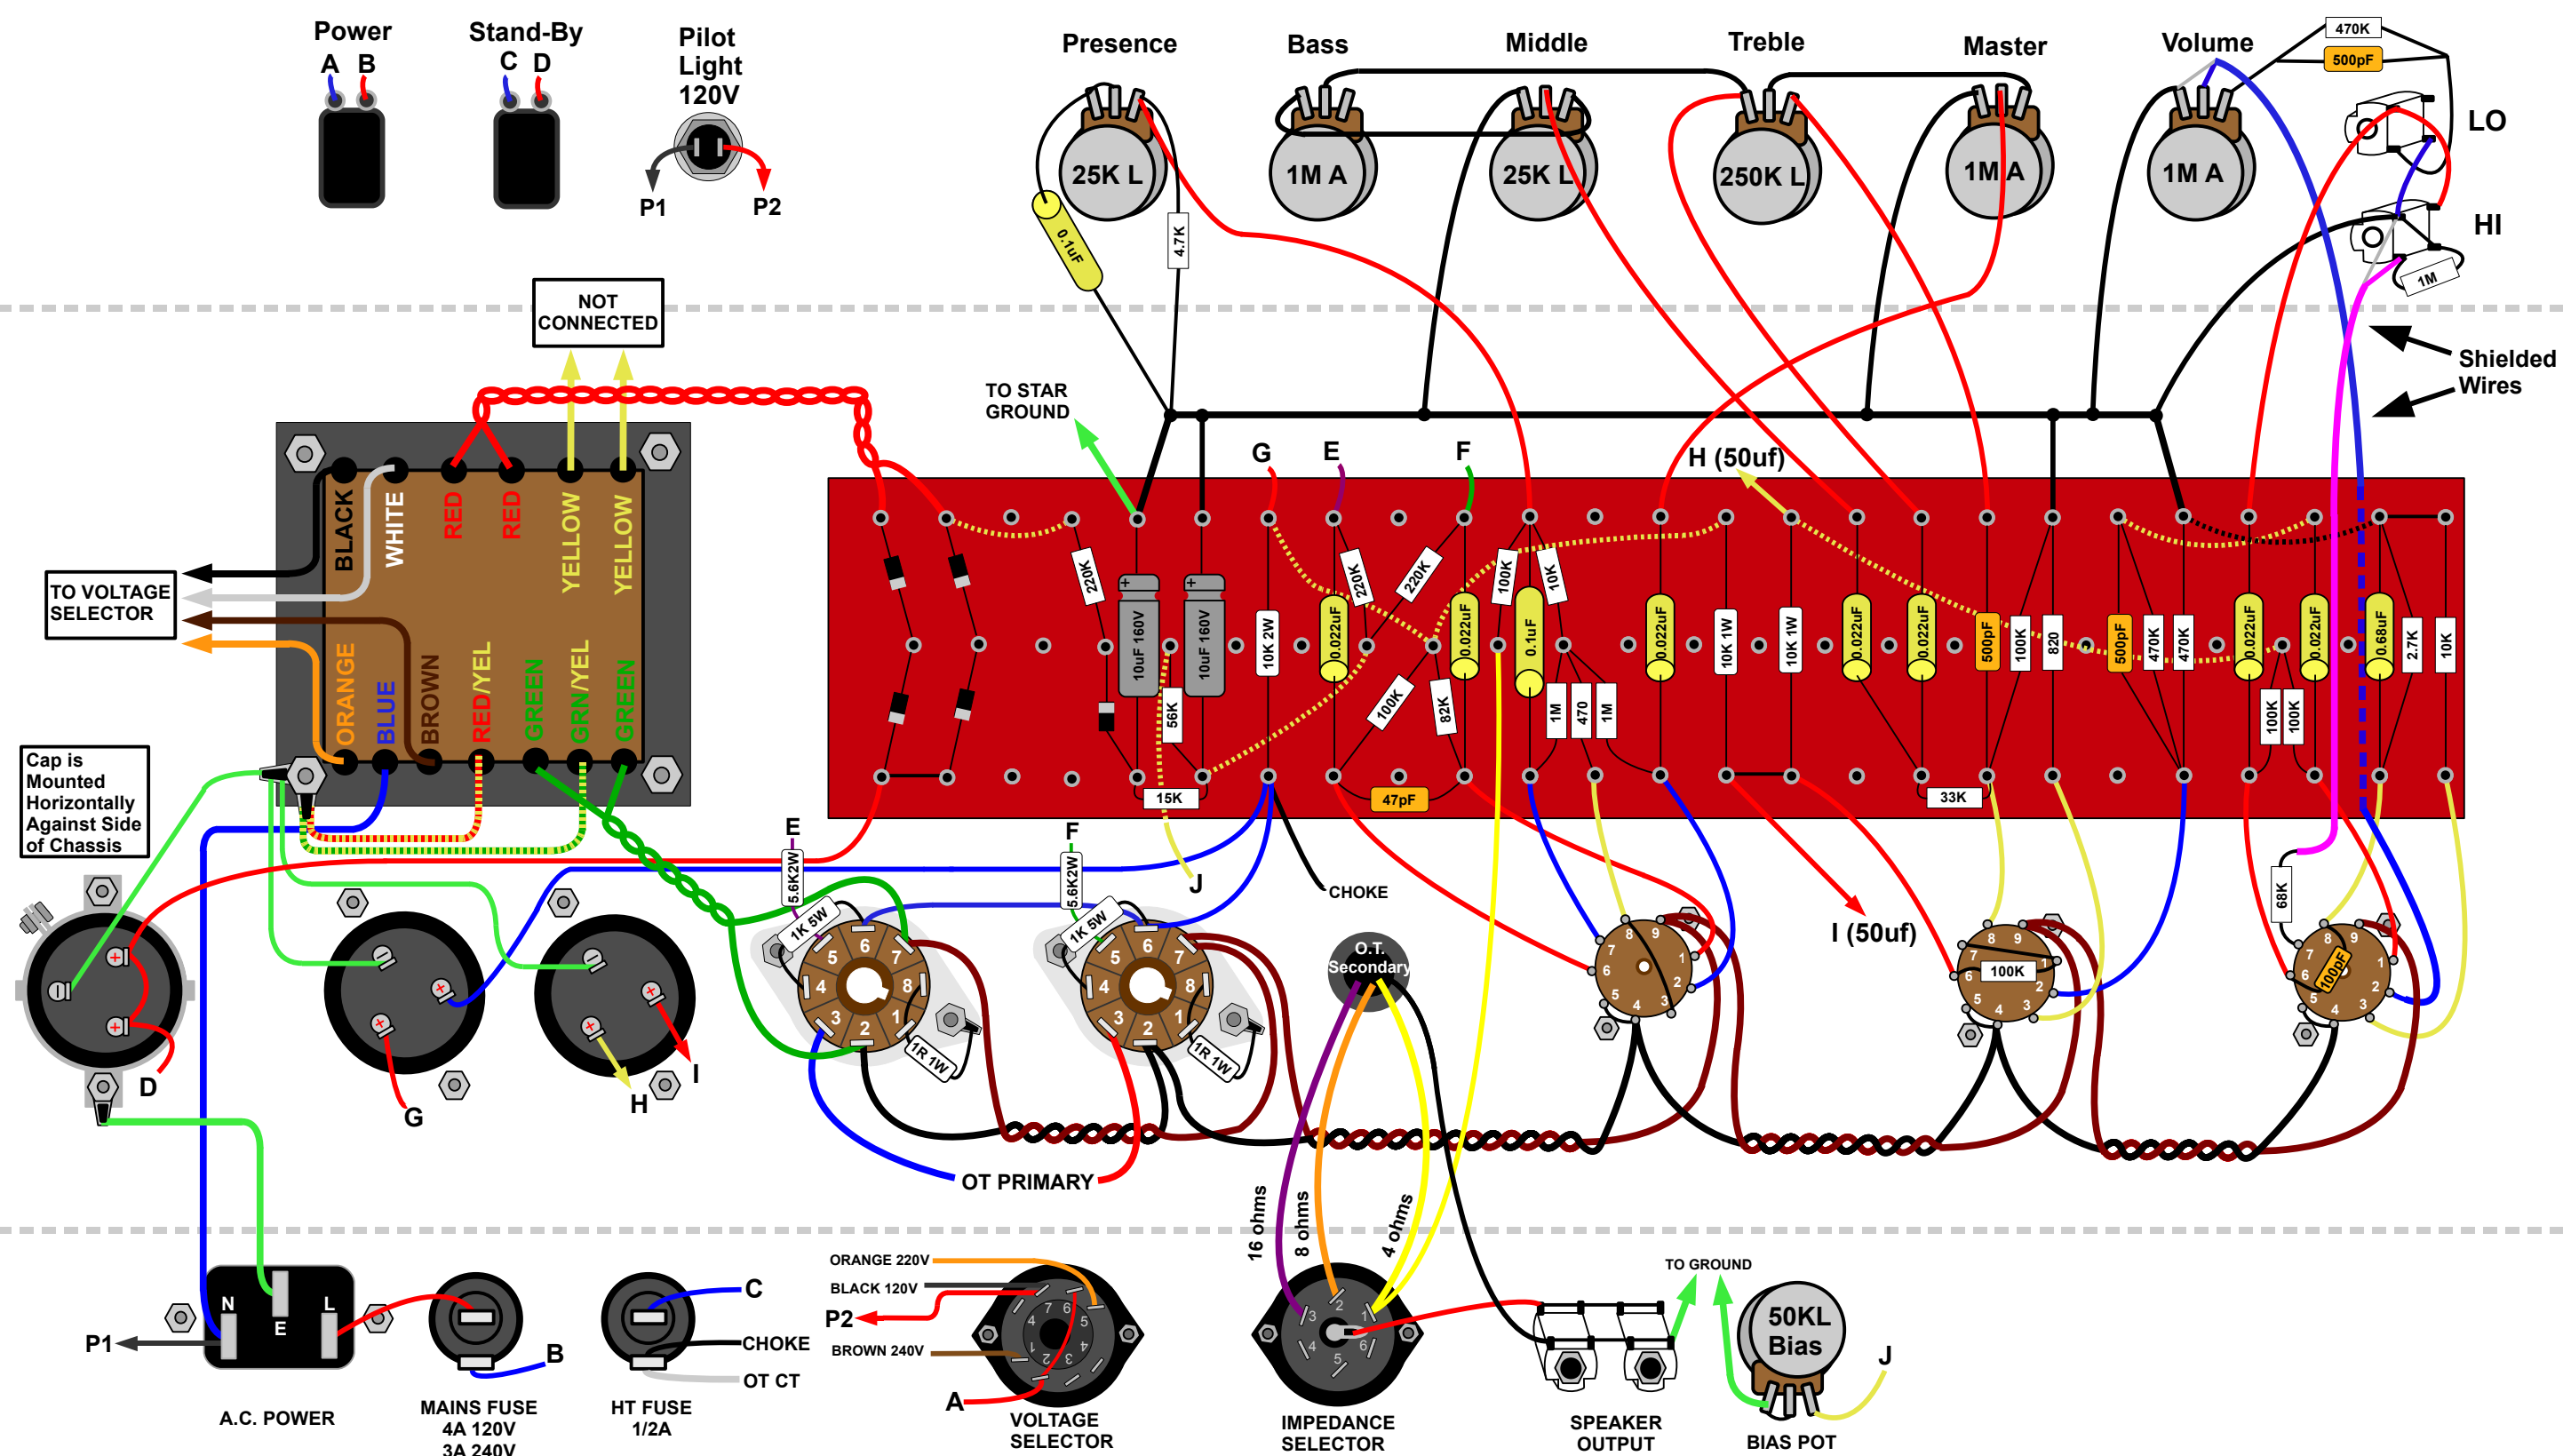

## Bias Adjustment for EL34's:

1) With speaker load connected, turn power "ON" and let tubes warm up. Switch standby to "ON."

2) Set your meter to the Highest DC volts setting (600V or higher), and put the common (ground) lead on one of the chassis mounting nuts or alligator clip it to the chassis. Touch the positive lead to Pin 3 (plate) of one of the EL34 power tube sockets. This is your Plate Voltage. Write it down.

**\*BE VERY CAREFULL WITH THIS STEP (HIGH VOLTAGES PRESENT)\***

3) EL34's are 25 watts maximum dissipation and you want to set the bias to 70% max dissipation. (70% = 17.5 watts) Divide your desired wattage by the plate voltage that you wrote down from step 2. (example:  $17.5/450 = .038$  or 38mV) This is your desired bias voltage (probably between 30 and 40 mV).

4) Set your meter to lowest DC Volts setting (200mV or less) and touch the common (ground) lead to the grounded side of the 1 ohm resistor coming off of Pin 1 and the positive lead to the Pin 1 side. Adjust the bias potentiometer until the bias voltage you calculated from from Step 3 is achieved.

Plate voltage will change a little when adjusting the bias, so you may need to take another reading from Pin 3 and adjust your equation accordingly and repeat steps 3 & 4.

## Notes:

- \*Twist filament wires together tightly
- \*Check Polarity (+ & -) of all Electrolytic Capacitors. In the bias supply the (+) side is grounded.
- \*All Resistors are 1/2W Unless Noted
- \*Shielded Wires are only grounded at one end.
- \*White wire from PT is for 230V primary.
- \*Power Transformer: 40-18033
- \*Output Transformer: 40-18025
- \*Choke: 22699 or 40-18003

For Technical Questions or Comments, Email us at: [questions@triodestore.com](mailto:questions@triodestore.com)

